




User's Guide

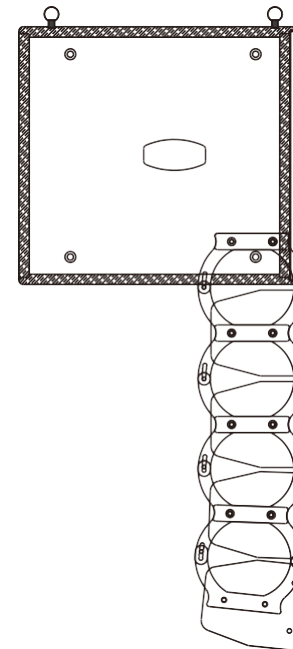

MODEL:
DHL2450
DHL10B



NO. MZY20081107-02

Standards : SJ/T 10406-93

※Please keep the user's manual!

Use the product carefully before you read the instructions

Активная низкочастотная акустическая система **DHL10**

Компоненты : 10"

Частотный диапазон : 45Гц-250Гц

Максимальный уровень SPL : 120 дБ

Мощность/ Встроенный усилитель: 350 Вт (SUB)+ 350 Вт (SAT out)

Разъемы : XLR F (input FULL), XLR M (link FULL), XLR F (input SUB), XLR M (link SUB) Powercon (type A),

SpeakOn (SAT out)

Материал корпуса :фанера

Размер (В × Ш× Г) : 490×540×266 мм:

Вес : 19.5 кг

Пассивный модуль линейного массива **DHL2450**

Компоненты : 2 × 4"

Частотный диапазон : 110 Гц - 20 к Гц

Направленность : 120° × 15°

Максимальный уровень SPL : 118 дБ

Мощность (AES/ prog/ peak): 150/300/600 Вт, 16 Ом:

Разъемы : SpeakOn (input), SpeakOn (link).

Материал корпуса : фанера


Размеры : (В × Ш× Г) : 490×300×135 мм

Вес : 6 кг

Cautions:

- use AC power supply
Make the machine voltage consistent with the electric voltage and frequency before operation to keep the machine work in order. Please push out the power pin while go out or travel for a long time.
- Protect the machine from high temperature
Keep it from the sunlit places, especially keep away from the electric equipment that is easy to produce high temperature.
- Keep ventilation
Keep the cool slot ventilation and convection around the machine. Avoid articles such as cloth ,paper, CD sheet from blocking the slot, in case that it will cumber the normal work even burn the machine because of the high temperature.
- Keep it from dank places
 - 1 This Amplifier should not be used near Water and/or a place that has too much wet
 2. Do not place any Flower Vases or any items containing water and/or the Heavy Object onto the top of Amplifier unit.
- Articles can not be put in
Articles cannot utterly put in: pin, iron, coin and other electric object.
Don't use the amp in case of short-circuit or burning out the machine if something fall into it a technician must be asked to take it out.
- Something abnormal happen
If something abnormal being noticed(such as noise, peculiar smell, high temperature, fog etc.) Turn it off and continue to use after settling the problems.
- Out wiping
The amp body can not clean with pesticides or other organic liquor in case of changing in colour or quality. Clean it with soft cloth and detergent(make sure the detergent will not do harm to the outlook of the amp).
- ▲● Don't remove it by yourself
Do not attempt to remove this Amplifier yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Always contact the qualified service technician if it is necessary.
- ▲● Replace the power fuse
Power fuse is beside the power socket. ask a technician to replace the fuse. pull out the power socket first then take out the fuse with a screw driver and replace it with a new one.

Panel function is introduced

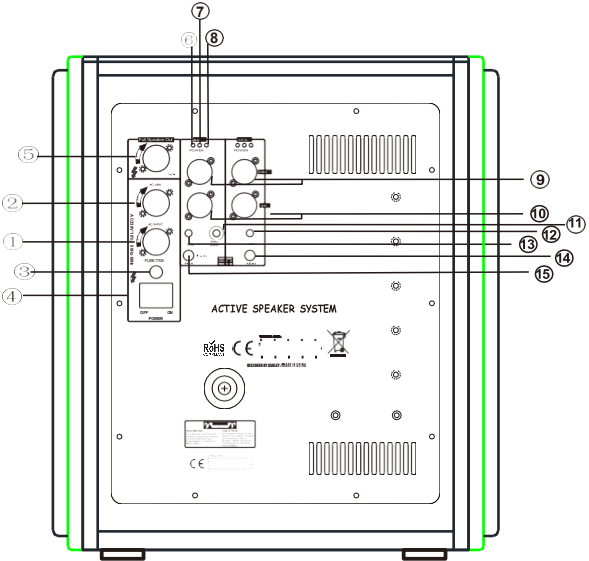

- 1. Power In
- 2. Power Link
- 3. Fuse T15a
- 4. Power Switch
- 5. Full Speaker Out
- 6. Power Indicator Light
- 7. Signal Indicator Light
- 8. Clip Indicator Light
- 9. Signal Input Full+sub
- 10. Signal Link Full+sub
- 11. Low Pass Freq Adjustment
- 12. Full Ch Volume Adjustment
- 13. Sub Ch Volume Adjustment
- 14. Input Mode (sub+full)
- 15. Sub Phase(0°/180°)

Installation connection diagram

