
# **INSTRUCTION MANUAL**

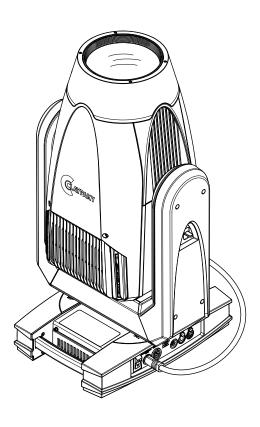

INDEX						
Page	Contents					
2	1.	Safety information				
3	2.	Unpacking and preparation				
4	3.	Installation and start-up				
4	3.1	Installing the fixture				
5	3.2	Connecting to manis supply				
5	3.3	Connecting the control signal line: DMX / Art-Net				
6	3.4	Switching on the fixture and basic SetUp				
8	4.	Maintenance				
8	4.1	Opening the covers				
9	4.2	Periodical cleaning				
10	4.3	Effects module removal				
14	4.4	Cleaning of the filters				
15	4.5	Rotating gobos				
17	4.6	Battery removal				
18	5.	Dimensions				
18	6.	6. Cause and solution of problems				

Congratulations on choosing a Claypaky product! We thank you for your custom.

Please note that this product, as all the others in the rich Claypaky range, has been designed and made with total quality to ensure excellent performance and best meet your expectations and requirements.

### 1. SAFETY INFORMATION

EN

#### SAFETY INFORMATION

IMPORTANT: Claypaky recommends you carefully read and keep the safety information on this product, also available in digital format at the following link:

### www.claypaky.com

Ref: FIS02A - Safety Information Sinfonya Profile 600

IT

#### INFORMAZIONI DI SICUREZZA

IMPORTANTE: Claypaky raccomanda di leggere accuratamente e conservare le informazioni di sicurezza relative a questo prodotto, sempre reperibili in versione digitale al seguente link:

### www.claypaky.com

Rif: FIS02A - Safety Information Sinfonya Profile 600

DE

### INFORMATIONEN ZUR SICHERHEIT

WICHTIG: Claypaky empfiehlt, die Sicherheitsinformationen bezüglich dieses Produkts genau zu lesen und aufzubewahren. Sie sind in Digitalversion immer unter folgendem Link auffindbar:

### www.claypaky.com

Ref: FIS02A - Safety Information Sinfonya Profile 600

ES

### **INFORMACIONES DE SEGURIDAD**

IMPORTANTE: Claypaky recomienda leer detenidamente y conservar la información de seguridad relativa a este producto. Además, está disponible una versión digital de la misma en el siguiente enlace:

### www.claypaky.com

Ref: FIS02A - Safety Information Sinfonya Profile 600

FR

### **CONSIGNES DE SÉCURITÉ**

IMPORTANT: Claypaky recommande de lire attentivement et de conserver les informations de sécurité relatives à ce produit, disponibles en version digitale au lien suivant:

### www.claypaky.com

Réf.: FIS02A - Safety Information Sinfonya Profile 600

RU


### ИНСТРУКЦИЮ ПО ТЕХНИКЕ БЕЗОПАСНОСТИ

ВАЖНО: Claypaky рекомендует внимательно прочитать и сохранить инструкцию по технике безопасности данного изделия, которая всегда доступна в электронном формате по следующей ссылке:


#### www.claypaky.com

FIS02A - Safety Information Sinfonya Profile 600

# 2. UNPACKING AND PREPARATION

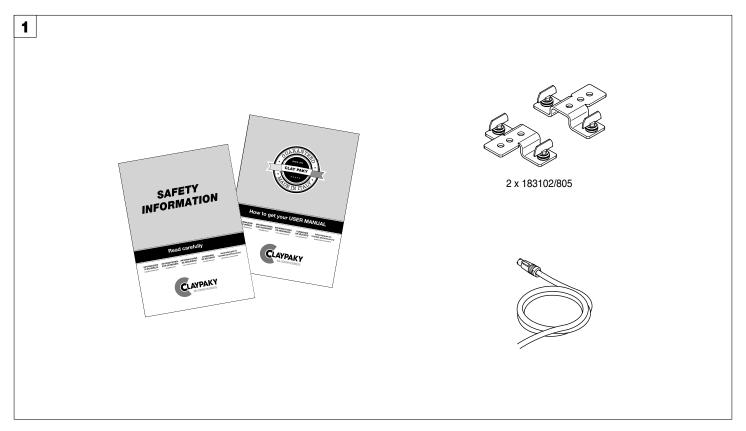

Packing contents - Fig. 1

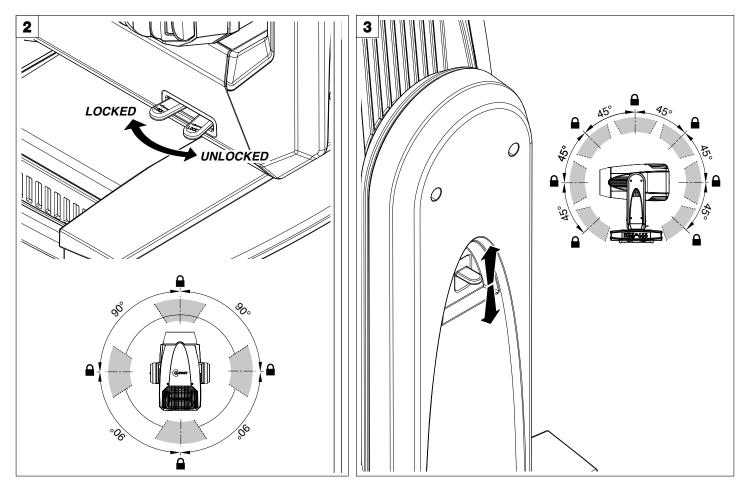


PAN Mechanism Lock and Release (every 90°) - Fig. 2

TILT Mechanism Lock and Release (every 45°) - Fig. 3

### 3. INSTALLATION AND START-UP


### 3.1 Installing the fixture

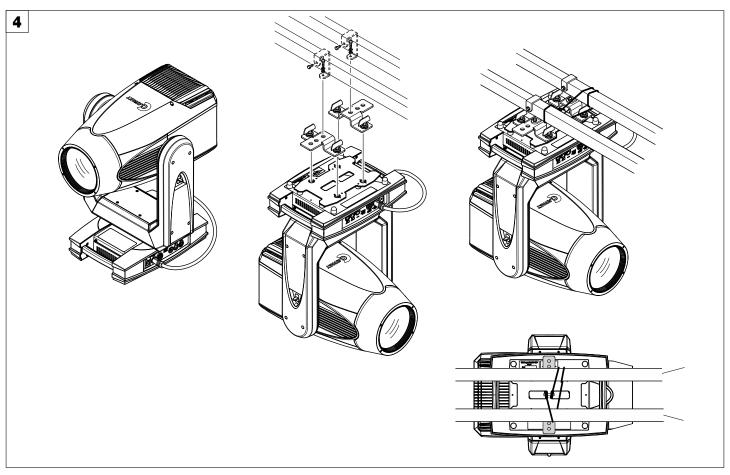

Installing the projector - Fig. 4


The projector can be installed on the floor resting on special rubber feet, on a truss or on the ceiling or wall.

WARNING: with the exception of when the projector is positioned on the floor, the safety cable must be fitted. (Cod. 105041/003 available on request). This must be securely fixed to the support structure of the projector and then connected to the fixing point at the centre of the base.

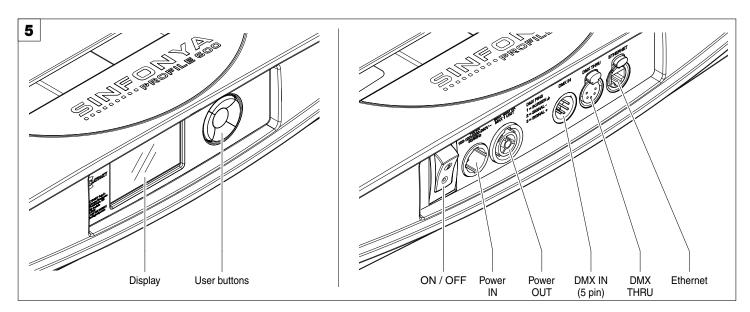


Control panel - Fig. 5

### 3.2 Connecting to manis supply

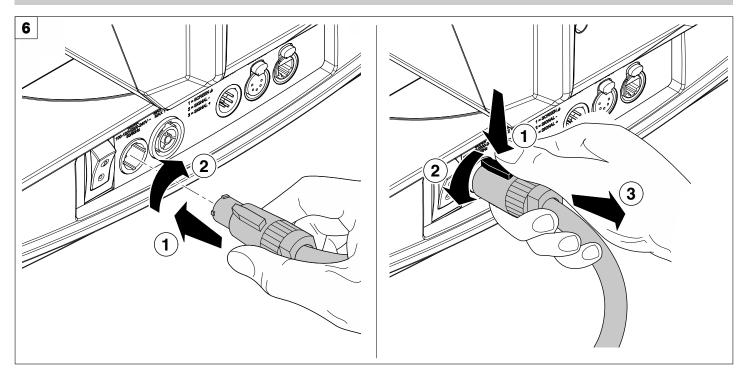


Connecting and disconnecting power cable - Fig. 6

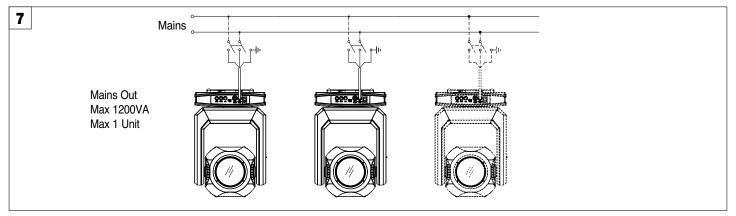

Connecting to the mains supply - Fig. 7

### 3.3 Connecting the control signal line: DMX / Art-Net

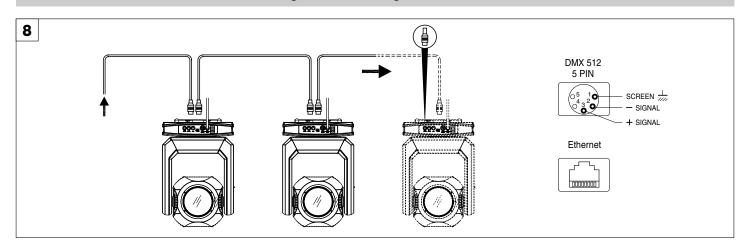


### Connecting to the control signal line (DMX) - Fig. 8

Use a cable conforming to specifications EIA RS-485: 2-pole twisted, shielded, 1200hm characteristic impedance, 22-24 AWG, low capacity. Do not use microphone cable or other cable with characteristics differing from those specified. The end connections must be made using XLR type 5 pin male/female connectors. A terminating plug must be inserted into the last projector with a resistance of 1200hm (minimum 1/4 W) between terminals 2 and 3.

**IMPORTANT:** The wires must not make contact with each other or with the metal casing of the connectors. The casing itself must be connected to the shield braid and to pin 1 of the connectors.

SINFONYA PROFILE 600 5

### 3.4 Switching on the fixture and basic SetUp

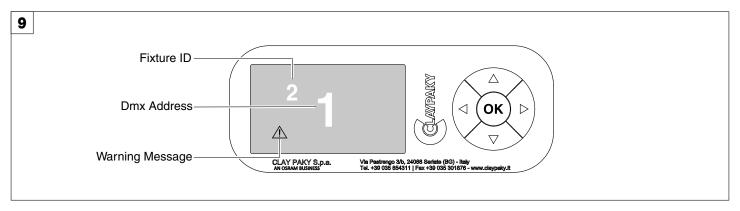

#### Switching on the projector - Fig. 9

Press the switch. The projector starts resetting the effects. At the same time, the following information scrolls on the display:




Sinfonya Profile 600 Firmware Version X.X.X Date - Hour

xxx (Fixture ID) Dmx Address xxx System errors
E: .....
W: .....

On conclusion of resetting in case of absence of the dmx signal, Pan and Tilt move to the "Home" position (Pan 128 bit - Tilt 128 bit). The control panel (Fig. 8) has a display and buttons for the complete programming and management of the projector menu. The display can be in one of two conditions: rest status and setting status. When it is in the rest status, the display shows the projector's DMX address and the Fixture ID address (if set).

During menu setting status, after a wait time (about 30 seconds) without any key having been pressed, the display automatically returns to rest status. It should be noted than when this condition occurs, any possible value that has been modified but not yet confirmed with the 🕲 key will be cancelled.

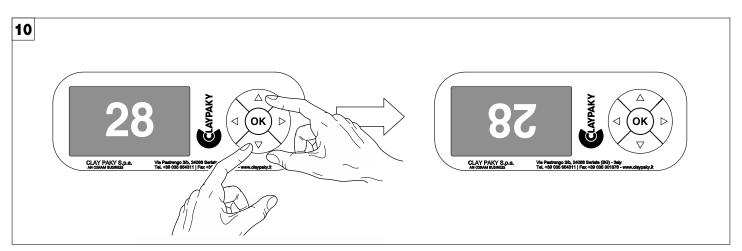

### Reversal of the display - Fig. 10

To activate this function, press UP 
and DOWN 
keys simultaneously while the display is in the rest mode. This status will be memorised and maintained even for the next time it will be switched on. To return to the initial state, repeat the operation all over again.

### Setting the projector starting address

On each projector, the starting address must be set for the control signal (addresses from 1 to 512).


The address can also be set with the projector switched off.

#### Setting the projector Fixture ID

On each projector, the Fixture ID address must be set for an easy identification of the fixtures in an installation (ID from 1 to 255).

The Fixture ID address can be set with the projector switched off.

### Functions of the buttons - Using the menu

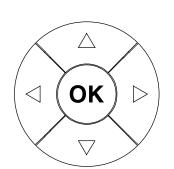



Confirms the displayed value, or activates the displayed function, or enters the successive menu



Decreases the value displayed (with auto-repetitions) or passes to the next item in the menu.



Increases the value displayed (with auto-repetitions) or passes to the previous item in a menu.



Return to the top level



Commute from units, tens, hundreds, in the "Address", "Fixture ID" and "Calibration" menù.

### **USING THE MENU:**


- 1) Press on once "Main Menu" appears on the display.
- 2) Use the UP 
  and DOWN 
  keys to select the menu to be used:
  - · Setup (Setup Menu): To set the setting options.
  - · Option (Option Menu): To set the operating options
  - · Informations (Informations Menu): To read the counters, software version and other information.
  - Manual Control (Manual control Menu): To trigger the test and manual control functions.
  - Test (Test Menu): To check the proper functionning of effects
  - · Advanced (Advanced Menu): Access to the "Advanced menu" is recommended for a trained technical personnel.
- 3) Press ( to display the first item in the selected menu.
- 4) Use the UP ( and DOWN keys to select the MENU items.

### Setting addresses and options with the projector disconnected

The projector's DMX address, as well as other possible operating options, can also be set when the appliance is disconnected from the electricity supply. All that is needed is to press to momentarily activate the display and thus access the settings. Once the required operations have been carried out, the display will switch off again after a wait time of 30 seconds.

# 4. MAINTENANCE


## 4.1 Opening the covers

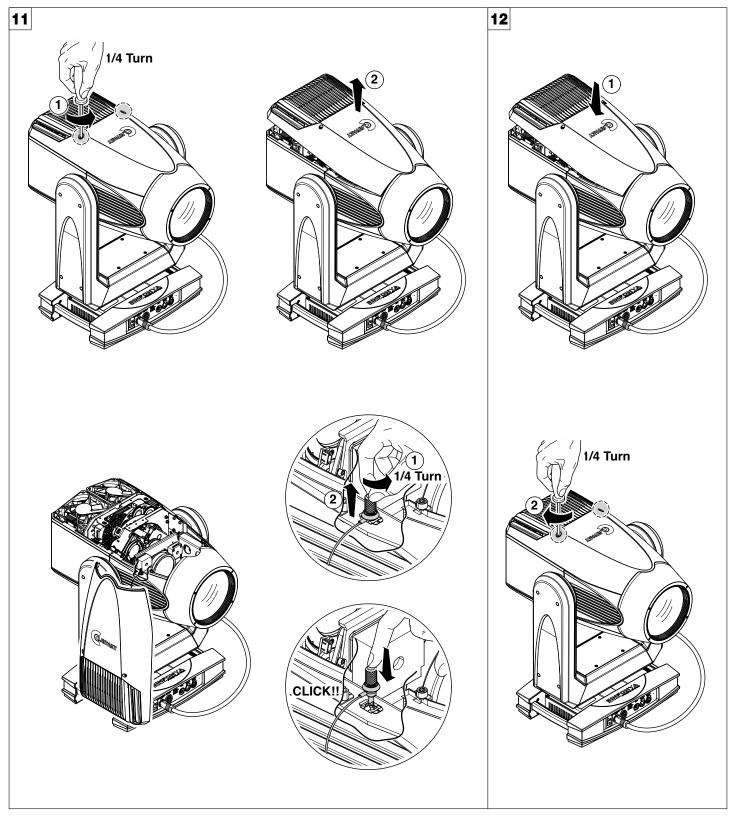

**Locking and releasing Pan and Tilt movements** - Refer to the instructions in the UNPACKING AND PREPARATION section. **Opening the head covers** - Fig. 11.

Closing the head covers - Fig. 12.

### 4.2 Periodical cleaning

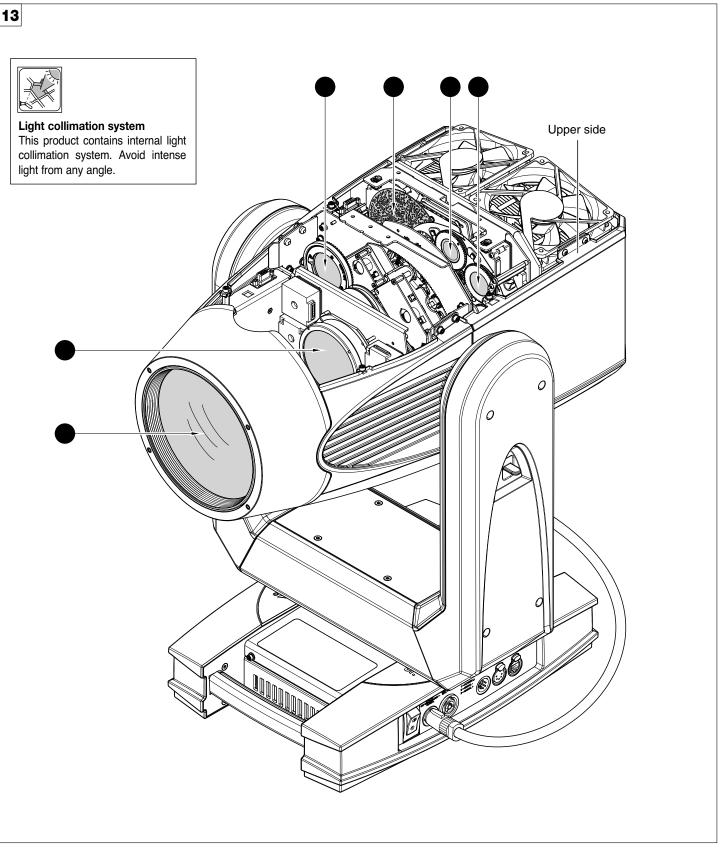

### Periodical cleaning - Fig. 13


To ensure optimal operation and performance for a long time it is essential to periodically clean the parts subject to dust and grease deposits. The frequency with which the following operations are to be carried out depends on various factors, such as the amount of the effects and the quality of the working environment (air humidity, presence of dust, salinity, etc.).

Use a soft cloth dampened with any detergent liquid for cleaning glass to remove the dirt from the reflectors, from the lenses and filters. It is recommended that the projector undergoes an annual service by a qualified technician for special maintenance involving at least the following operations:

9

- General cleaning of internal parts.
- Restoring lubrication of all parts subject to friction, using lubricants specifically supplied by Claypaky.
- General visual check of the internal components, cabling, mechanical parts, etc.
- Electrical, photometric and functional checks; eventual repairs.


### 4.3 Effects module removal

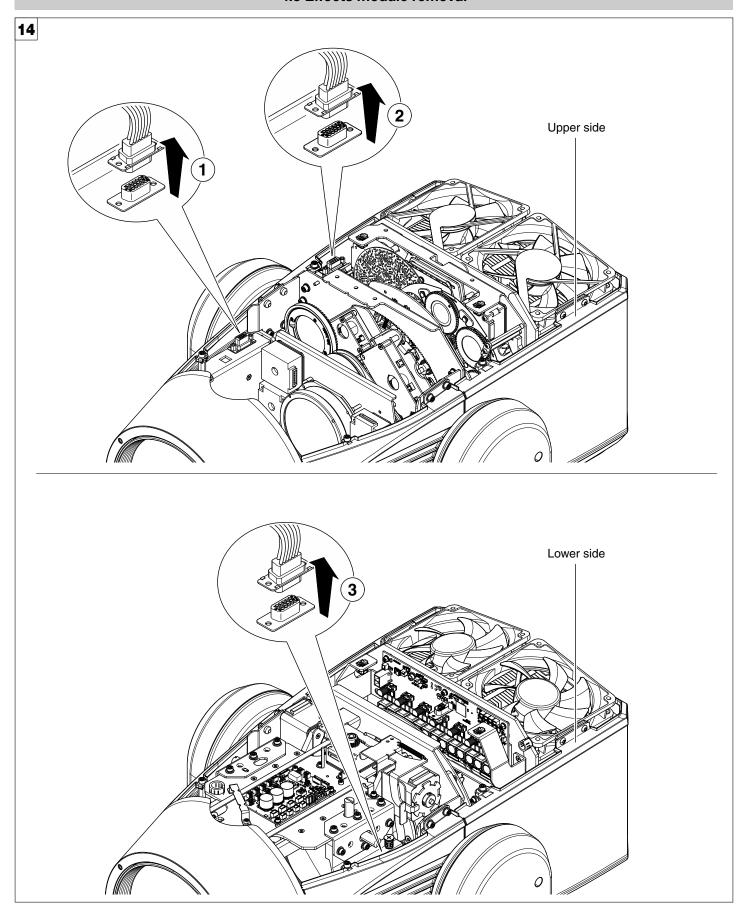

 $\textbf{Extraction of the effect modules: Preliminary operations} \ - \ \text{Fig. } 14.$ 

#### NOTE:

- Do not disconnect wiring harnesses when the fixtures is switched-on, to avoid to damage electronic boards.
- Do not switch-on the fixtures with wiring harness disconnected.

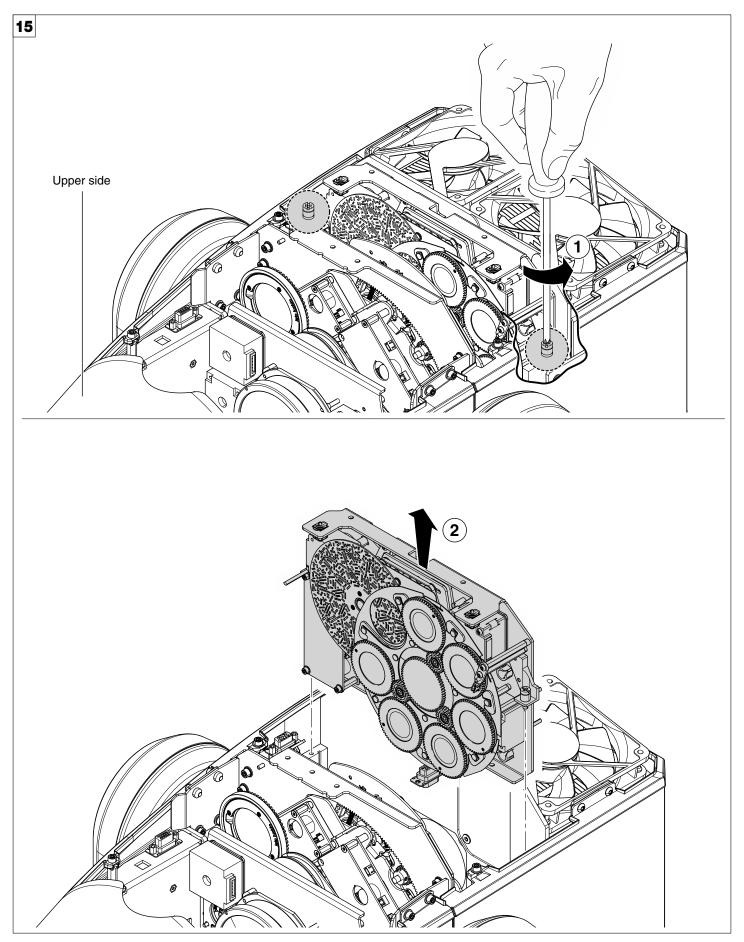


Extraction of the effect modules - Fig. 15.

IMPORTANT: Grasp the modules using the support structure and not the details which could get damaged.

Insertion of the effect modules: Repeat the operations indicated in Fig. 15, 16 and 17 in reverse order.

SINFONYA PROFILE 600 11


Continue →

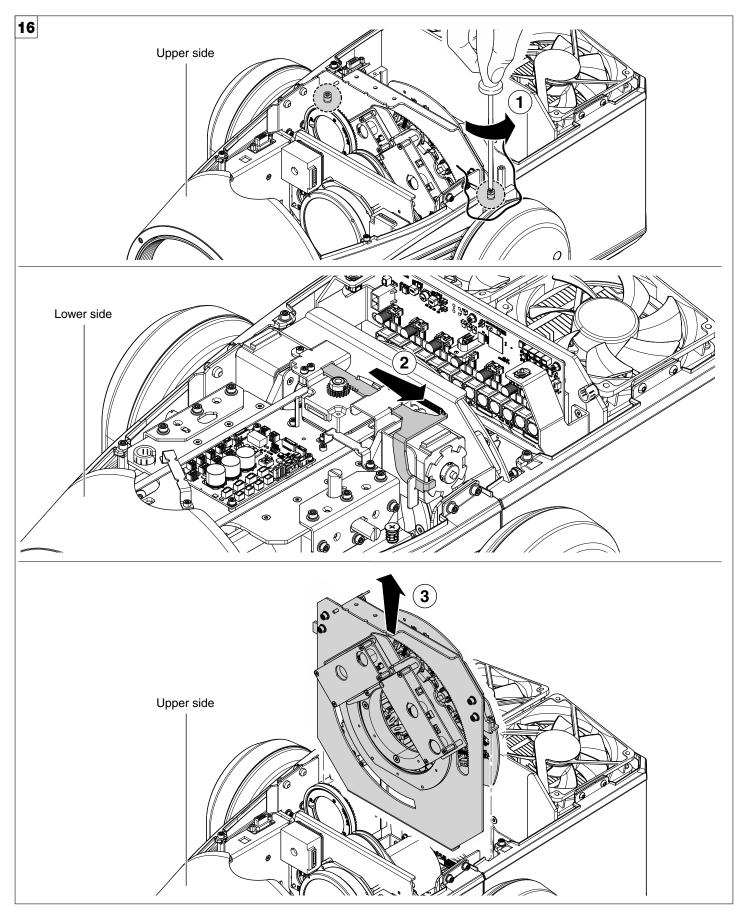

Extraction of the effect modules - Fig. 16.

IMPORTANT: Grasp the modules using the support structure and not the details which could get damaged.

Insertion of the effect modules: Repeat the operations indicated in Fig. 15, 16 and 17 in reverse order.

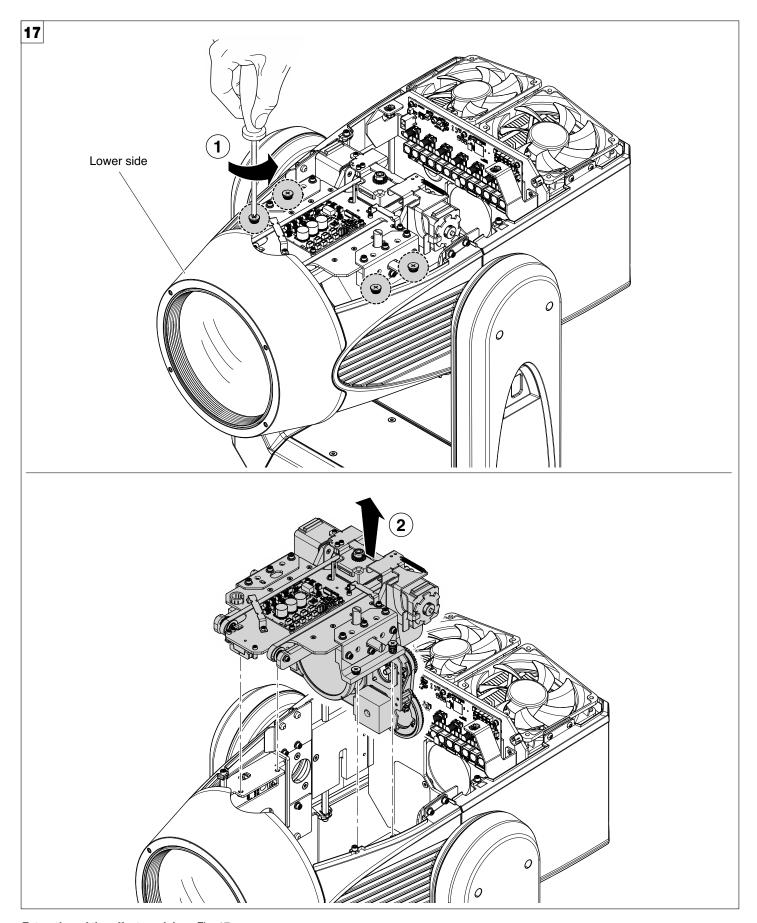

Extraction of the effect modules - Fig. 17.


IMPORTANT: Grasp the modules using the support structure and not the details which could get damaged.

Insertion of the effect modules: Repeat the operations indicated in Fig. 15, 16 and 17 in reverse order.

SINFONYA PROFILE 600 13


Continue →

# 4.4 Cleaning of the filters

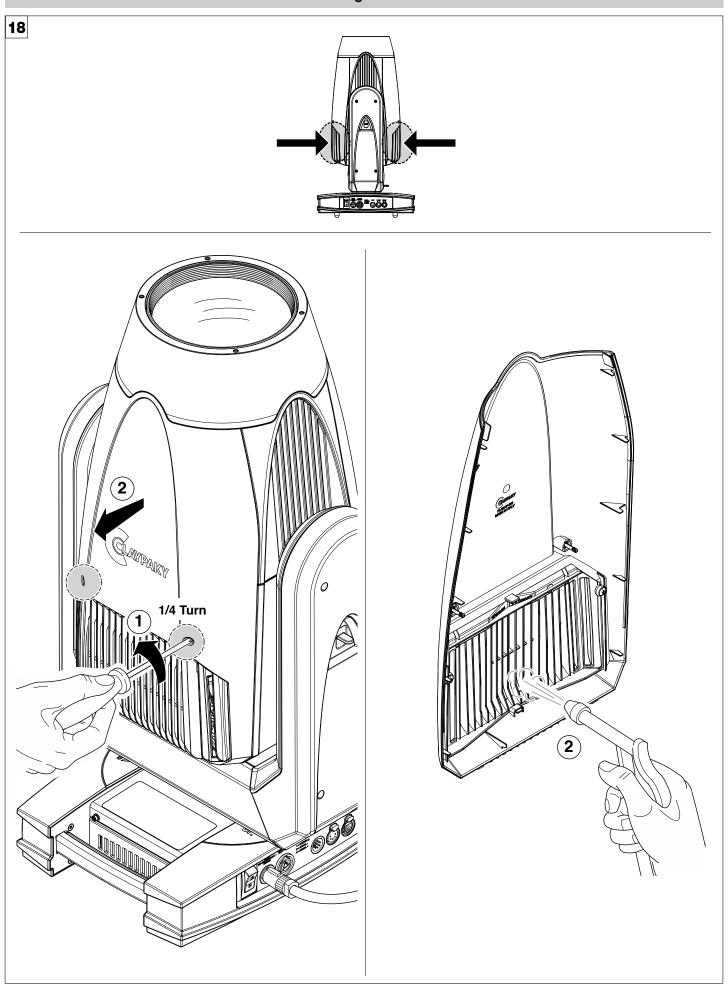


Cleaning of the grids - Fig. 18.

# 4.5 Rotating gobos

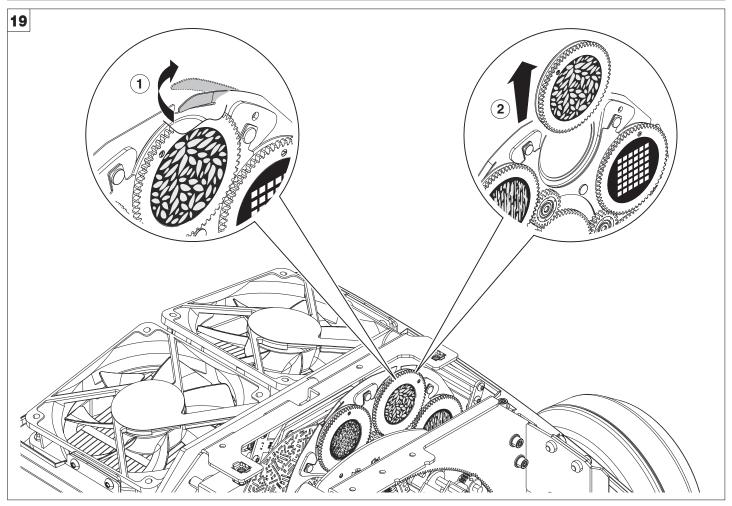


Bearing group replacement - Fig. 19

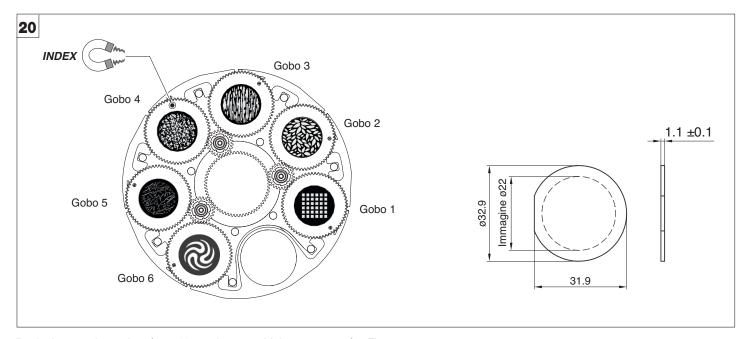

15

Replacing rotating gobos (max 22 mm image - thickness 1.1 mm) - Fig. 20


- The rotating gobo wheel only use dichroic glass gobos (it is not possible to use metal gobos);
- For more information contact Claypaky;

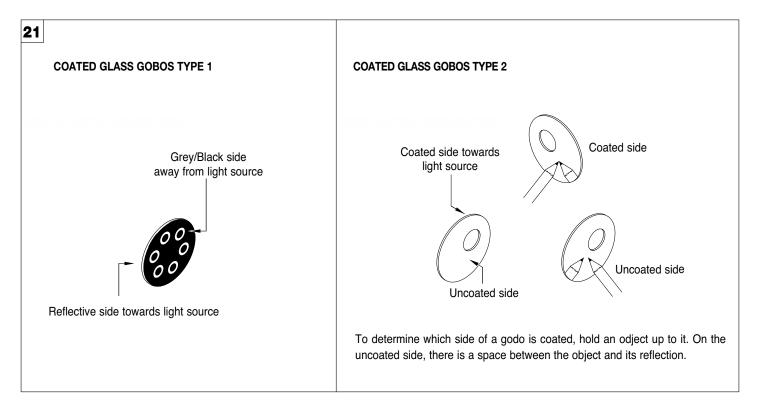

Gobo orientation - Fig. 21

The pictures shown the correct gobos orientation.


# 4.6 Battery removal

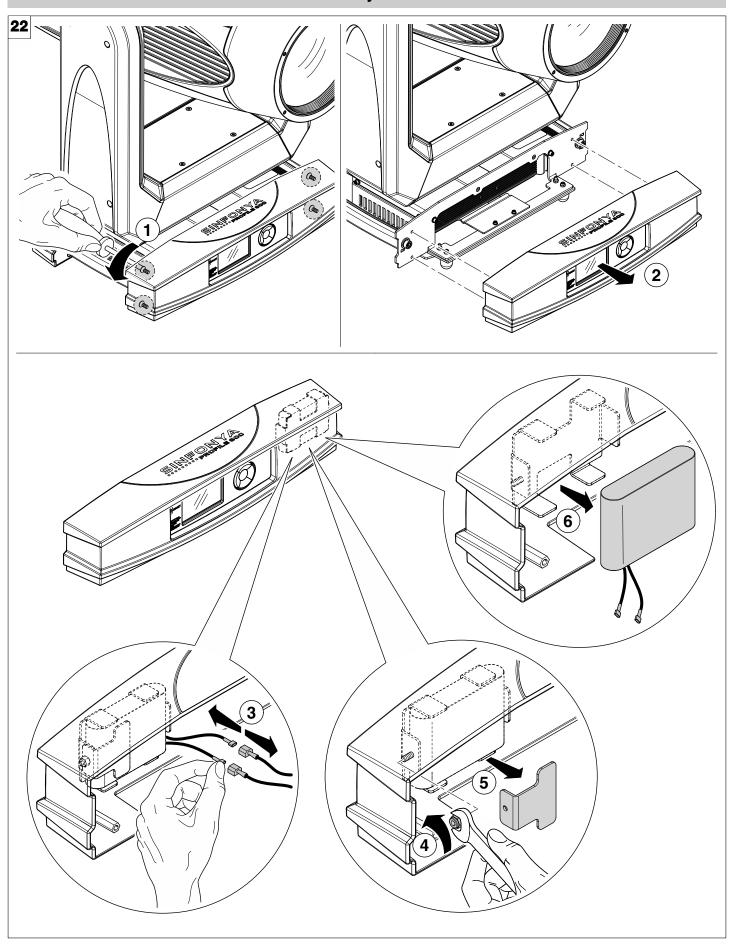



This product contains a rechargeable battery. To preserve the environment, please dispose the battery at the end of its life according to the regulation in force.

# 5. DIMENSIONS

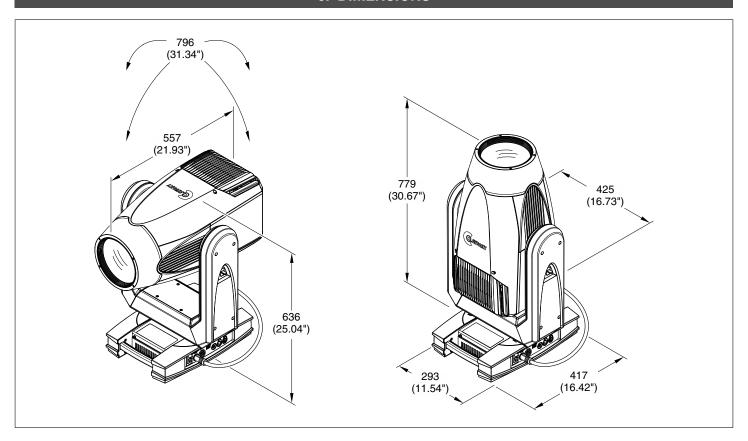

	6. CAUSE AND SOLUTION OF PROBLEMS						
	THE PRO	JECTOR WILL NOT SWITCH ON					
	ELEC	CTRONICS NON-OPERATIONAL	PROBLEMS				
	D	EFECTIVE PROJECTION					
		REDUCED LUMINOSITY					
		POSSIBLE CAUSES	CHECKS AND REMEDIES				
•		No mains supply.	Check the power supply voltage.				
•		Light source exhausted or defective.	Call an authorised technician.				
	•	Signal transmission cable faulty or disconnected.	Replace the cables.				
	•	Incorrect addressing. Check addresses (see instructions).					
	•	Fault in the electronic circuits.  Call an authorised technician.					
	•	Lenses broken					
	•	Dust or grease deposited.	Clean (see instructions).				